

## Graffiti Shortcuts

- l.. 4 - displays user name assigned to device along w/ a number that HotSync uses internally to identify user
- l.. 5 - erases above info
- l.. 6 - Displays date & time of rom build
- l.. i - enables device to receive beams
- l.. S - toggles serial IR on and off
- l.. 7 (t) - loop back IR to device

## Palm Error Manager

(Useful for displaying errors dynamically)

ErrDisplay ("Gosh! An error occurred");

UInt 16 ErrFatalDisplayIf (result > 4, "Error");

can also have NonFatal

Error level is set using a # defined  
# define ERROR\_CHECK\_NONE